

## REMOVING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

1. Stand the vehicle on a level surface.

EWA13120

### **WARNING**

Securely support the vehicle so that there is no danger of it falling over.

### TIP

Place the vehicle on a suitable stand so that the front wheel is elevated.

2. Remove:

- Upper bracket bolt "1"
- Washer


3. Loosen:

- Lower bracket pinch bolt "2"

EWA18640

### **WARNING**

Before loosening the lower bracket pinch bolt, support the front fork leg.

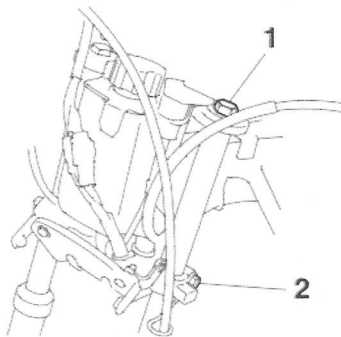

4. Remove:

- Front fork leg

## DISASSEMBLING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

1. Remove:


- Cap bolt

2. Drain:

- Fork oil

### TIP

Stroke the inner tube several times while draining the fork oil.

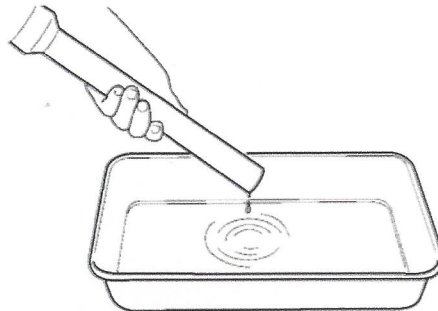


3. Remove:

- Dust seal "1"
- Oil seal clip "2"  
(with a flat-head screwdriver)

ECA14180

### **NOTICE**

Do not scratch the inner tube.

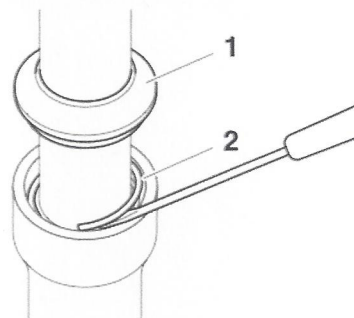

4. Remove:

- Damper rod bolt "1"
- Copper washer

### TIP

While holding the damper rod with the hexagon bit socket (10 mm) "2" and T-handle "3", loosen the damper rod bolt.



**T-handle**

90890-01326

T-handle 3/8" drive 60 cm long

YM-01326

